2. Reference

2-1. How To Install & Remove The Apparatus

Note! -. Use only the supplied mounting hardware for safe and secure installation.

-. Please consult your nearest dealer if you get any problems with installation.

Holder

-. Remove transport screw (You can not insert a CD until the screw is removed)

-. Insert the holder into the car radio slot. Fasten the holder by pulling and bending the tabs which are located around the holder as illustrated.

-. Press the open knob to open up the front panel and detach it by pulling it towards you.

* Insert the enclosed handles into the slits of the unit, as illustrated, while pressing the handle lightly, then pull the unit out of the holder.

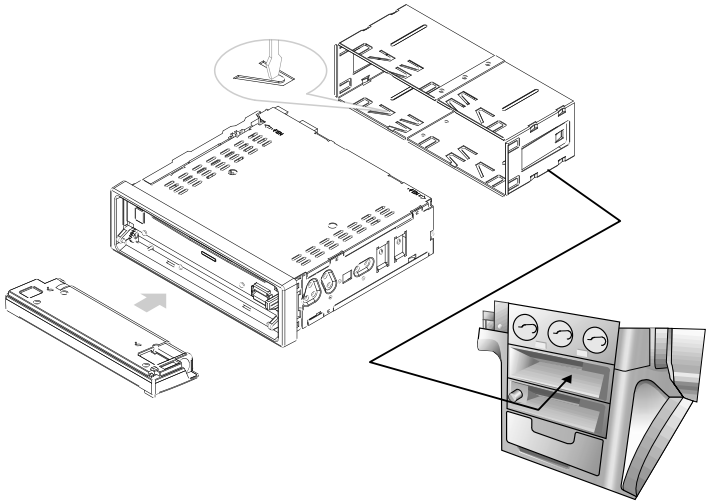

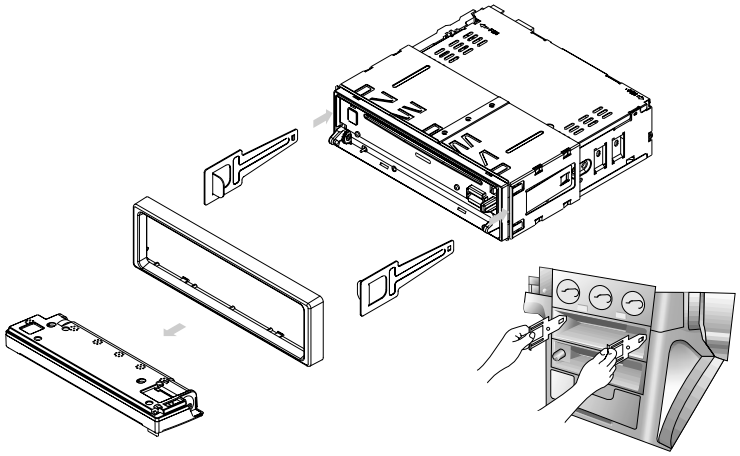

2-2. Wiring Connections

The pins in the ISO connector have the following functions (connector seen from the rear)

A. Electric Connections

4. Back-up+12V : YELLOW
5. +12V (electric antenna : BLUE
6. Dimmer : PINK
7. +12V supply(from ignition lock) : RED
8. Earth : BLACK

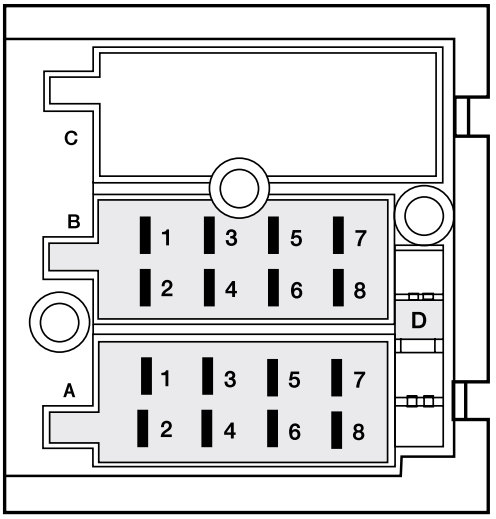

B. Loud Speaker

1. +Right Rear : VIOLET
2. - Right Rear : VIOLET/BLACK
3. +Right Front : GRAY
4. - Right Front : GRAY/BLACK
5. +Left Front : WHITE
6. - Left Front : WHITE/BLACK
7. +Left Rear : GREEN
8. - Left Rear : GREEN/BLACK

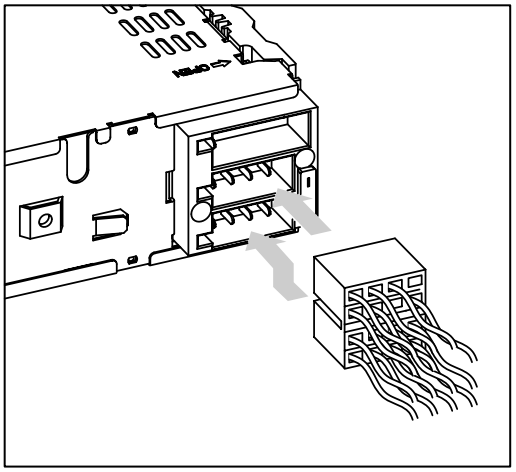

C. Fuse

10A

Note!

-. The red cable must be connected via the car's ignition lock to prevent unwanted discharge of the battery if it is not used for longer periods of time.

2-3. Front Panel

Detaching the front panel

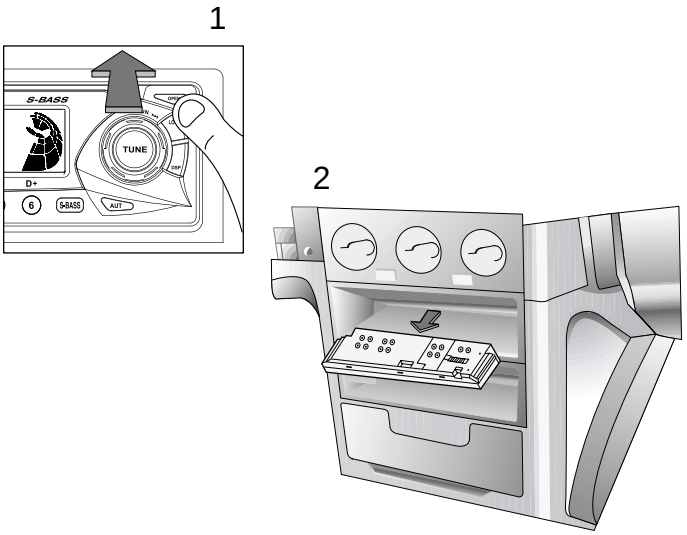

1.Press the open knob to open up the panel.

2.Holding the middle upper side of the panel, pull it straight out towards the arrow direction. (See the figure)

3.The red lamp blinks to tell you that the front panel has been detached.(It could be stolen)

4.Keep the front panel in the supplied protection case.

Attaching the front panel

1. Holding the panel at its top and bottom edges.
2. Attach one side of the panel lightly first, then push the other side of the panel into the unit.
3. Do not press the panel hard against the unit. It can be attached by pressing it lightly. And beware not to drop it.

* Keep in mind !!

-. If it works malfunction, take the panel off and put it back again.

-. Do not touch the contact pins on the rear of the front panel, this can cause contact errors. If the contacts are not clean, clean contacts with a cotton swab dipped in alcohol.

-. Do not expose the front panel to direct heat or cold.

-. Be careful not to splash juice or other soft drinks into the car audio.

-. Do not apply too much force. Otherwise, the panel may be damaged.

-. Never take the front panel apart.

-. When front panel is open, beep sound once after 57 seconds, then beep sound twice after 58 seconds and power turns off at 1 minute.